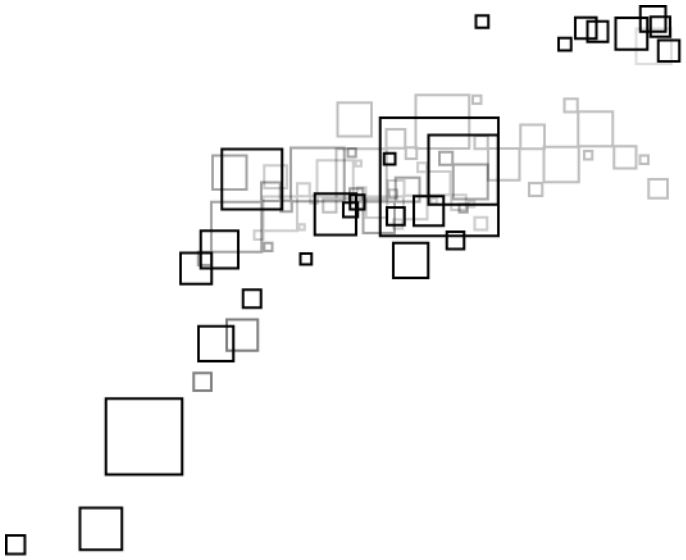

User Manual

500Mbps 4-Port HomePlugAV Ethernet Adaptor

Legal Notice

2011 © All rights reserved. Version 1.0

No part of this document may be reproduced, republished, or retransmitted in any form or by any means whatsoever, whether electronically or mechanically, including, but not limited to, by way of photocopying, recording, information recording, or through retrieval systems without the express written permission. We reserve the right to revise this document at any time without the obligation to notify any person and/or entity. All other company or product names mentioned are used for identification purposes only and may be trademarks of their respective owners.

LIMITATION OF LIABILITY AND DAMAGES

THE PRODUCT AND THE SOFTWARES WITHIN ARE PROVIDED "AS IS," BASIS. THE MANUFACTURER AND MANUFACTURER'S RESELLERS (COLLECTIVELY REFERRED TO AS "THE SELLERS") DISCLAIM ALL WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ANY WARRANTIES ARISING FROM COURSE OF DEALING, COURSE OF PERFORMANCE, OR USAGE OF TRADE. IN NO EVENT WILL THE SELLERS BE LIABLE FOR DAMAGES OR LOSS, INCLUDING BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL WILLFUL, PUNITIVE, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL, DAMAGES, DAMAGES FOR LOSS OF BUSINESS PROFITS, OR DAMAGES FOR LOSS OF BUSINESS OF ANY CUSTOMER OR ANY THIRD PARTY ARISING OUT OF THE USE OR THE INABILITY TO USE THE PRODUCT OR THE SOFTWARES, INCLUDING BUT NOT LIMITED TO THOSE RESULTING FROM DEFECTS IN THE PRODUCT OR SOFTWARE OR DOCUMENTATION, OR LOSS OR INACCURACY OF DATA OF ANY KIND, WHETHER BASED ON CONTRACT, TORT OR ANY OTHER LEGAL THEORY, EVEN IF THE PARTIES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE PRODUCT OR ITS SOFTWARE IS ASSUMED BY CUSTOMER. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO THE PARTIES. IN NO EVENT WILL THE SELLERS' TOTAL CUMULATIVE LIABILITY OF EACH AND EVERY KIND IN RELATION TO THE PRODUCT OR ITS SOFTWARE EXCEED THE AMOUNT PAID BY CUSTOMER FOR THE PRODUCT.

Contents

About the Product 5

How Does It Work? 5

Direct Connection 6

Package Contents 7

Device Design 7

Pairing the Device 9

How to Use Simple Connect 10

- Resetting the Private Network Name 10
- Creating a Secured HomePlugAV Network 11
- Joining an Existing Secured HomePlugAV Network 16

Power Saving Mode 20

Getting Started 21

Plan Your Network 22

Local Network 22

Setup the HomePlugAVs 23

For Twin Pack 23

For Single Pack 23

About HomePlugAV Utility 25

Requirements 25

Installation 26

Opening HomePlugAV Utility 27

The User Interface 27

Home 28

Private Network Name 29

- Local Private Network Name 30
- Remote Private Network Name 30
- Simulate Simple Connect Button 31

Quality of Service 32

Devices 34

Firmware Upgrade 35

Appendix 37

Frequently Asked Questions 37
FCC Statement 41

About the Product

HomePlugAV is ready to use out of the box and does not require the installation of driver software to work. It can be connected to computers, routers, gaming consoles, hubs, IPTV set-top boxes, and other Ethernet devices regardless of operating system.

How Does It Work?

HomePlugAV utilizes the existing electrical wiring in the house as a path to create a secured network of computers and Ethernet devices. With a maximum data rate of up to 500 Mbps, HomePlugAV can reliably handle high requirement applications like broadband Internet, high definition video streaming, and Voice over IP.

HomePlugAV converts digital signals to a complex analog signal that traverses along the electrical wires. When receiving the analog signal, HomePlugAV converts the analog signal back to digital. To make the signal secured, a 128-bit AES encryption is applied.

A HomePlugAV device can only communicate with other HomePlugAV devices that use the same Private Network Name. The Private Network Name can be changed manually using the HomePlugAV Utility software on a computer with a Windows operating system. When you use the software, you have to manually type the Private Network Name for the device. Another way to change the Private Network Name is to use the Simple Connect button. Simple Connect automatically creates an encrypted Private Network Name. It can also be used to reset the Private Network Name or to add a device into an existing HomePlugAV network.

Note: HomePlugAV devices are already configured to use a common Private Network Name.

When a HomePlugAV communicates with another device, the Powerline Activity LED color will give you an idea about the connection rate: Red means below 30 Mbps; Amber means 30 to 80 Mbps; and Green means more than 80 Mbps.

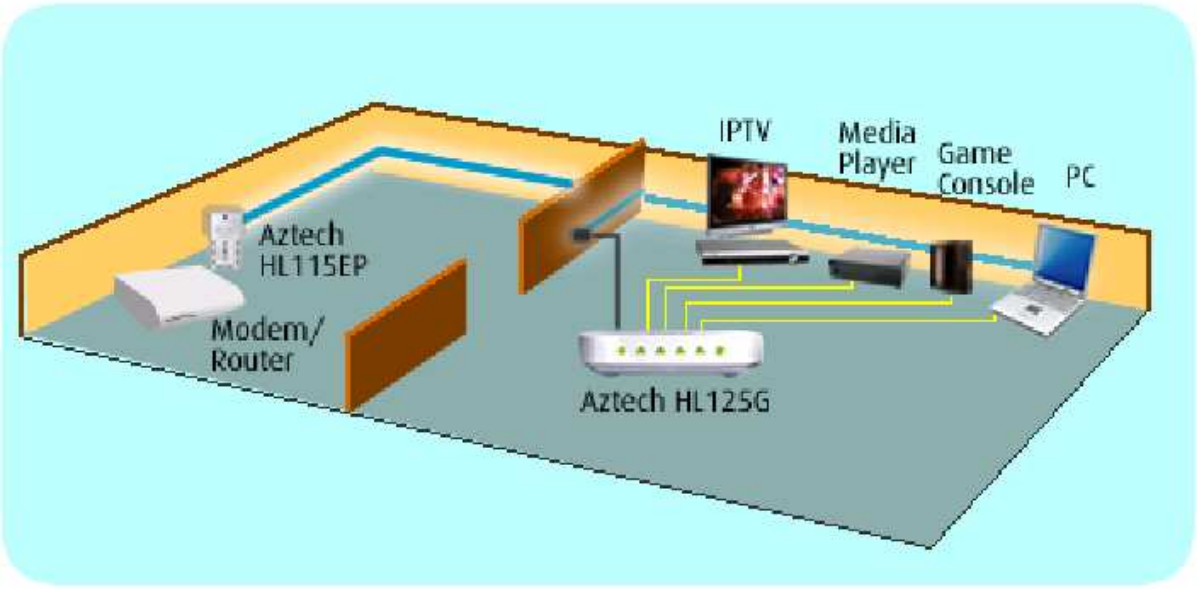

Direct Connection

For best performance, connect HomePlugAV directly to a wall outlet. Avoid connecting it to a power strip where other electrical devices are connected. Other devices create electrical noise that may affect the performance of HomePlugAV.

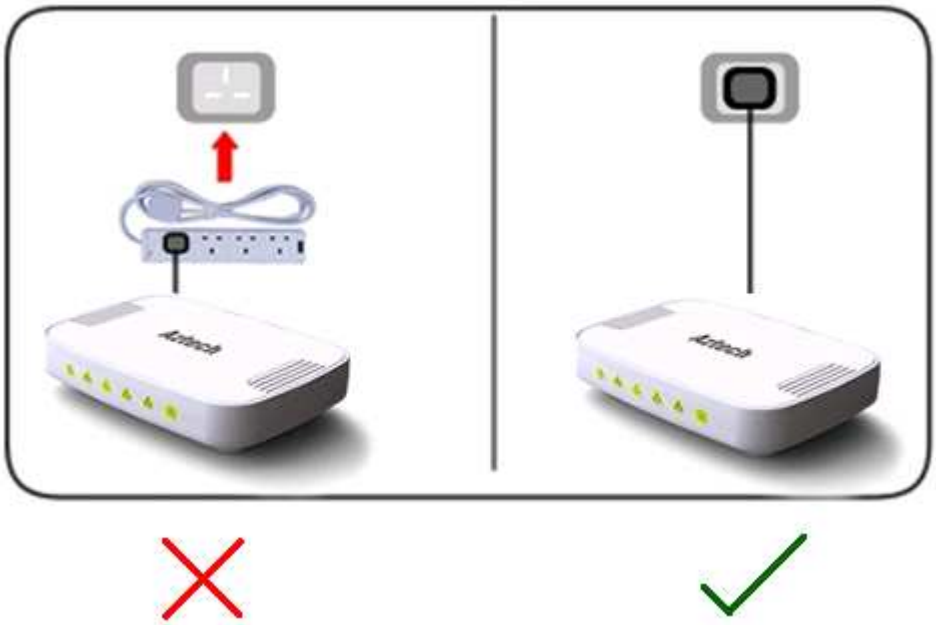

Package Contents

The package contains the following items:

- 1 HomePlugAV for Single Pack or 2 HomePlugAVs for Twin Pack
- 1 Ethernet cable for Single Pack or 2 Ethernet cables for Twin Pack
- Resource CD that contains the HomePlugAV Utility installer and the User Manual.
- Easy Start Guide

Device Design

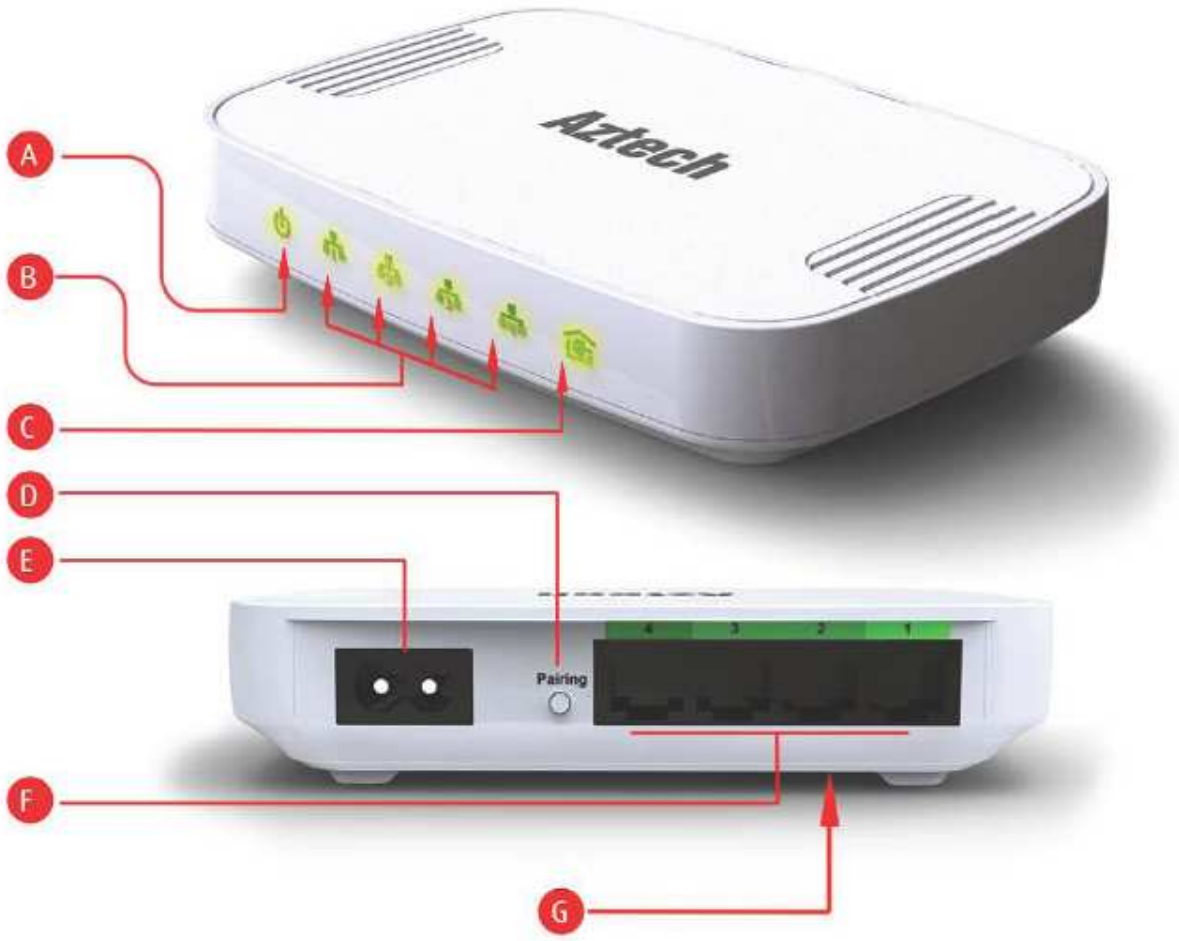

	Label	Status	Description/ Function
A	**Power**	Blinking slowly	When LED is blinking slowly in Green color HomePlugAV is on a Power Saving status.
		Off	No power.
		On	• After Simple Connect is pressed for two seconds, this LED will blink to confirm the button press. • When Simple Connect is pressed for 10 seconds, this LED will blink to confirm the Private Network Name reset.
B	**Ethernet LED**	Off	An Ethernet device is not connected.
		On - Green	Connected to a Gigabit (1000Mbps) device.
		On - Amber	Connected to a Fast Ethernet (10/100Mbps) device.
C	**Powerline Activity**	Off	Device is not connected to a HomePlugAV network.
		On	• This LED remains on when the device is part of a HomePlugAV network. • The LED color represents the connection rate within the HomePlugAV network whether it is good (red), better (amber), or best (green). • The LED flashes to indicate network activity.
D	**Power Jack**		Connecting the 4-Port HomePlugAV Power cable.
E	**Simple Connect Button**		Press to create or join a HomePlugAV network. It can also be used to reset the Private Network Name to a random key.
F	**Ethernet Ports**		Ethernet Port 1- Highest priority Ethernet Ports 2-3 – Medium priority Ethernet Port 4 – Lowest priority
G	**Reset Button**		Press for 3 seconds to reset to the factory default settings. When you reset to the factory default, all your configuration changes will be removed.

Pairing the Device

Your HomePlugAV devices by default are preconfigured to have a common Private Network Name. Setting up your HomePlugAV network is as easy as 1,2 and 3.

1. Plug in your HomePlugAV devices side by side to easily observe the LED behavior. Wait until the Power and PL-ACT LED turns ON to confirm that the connection has been established.

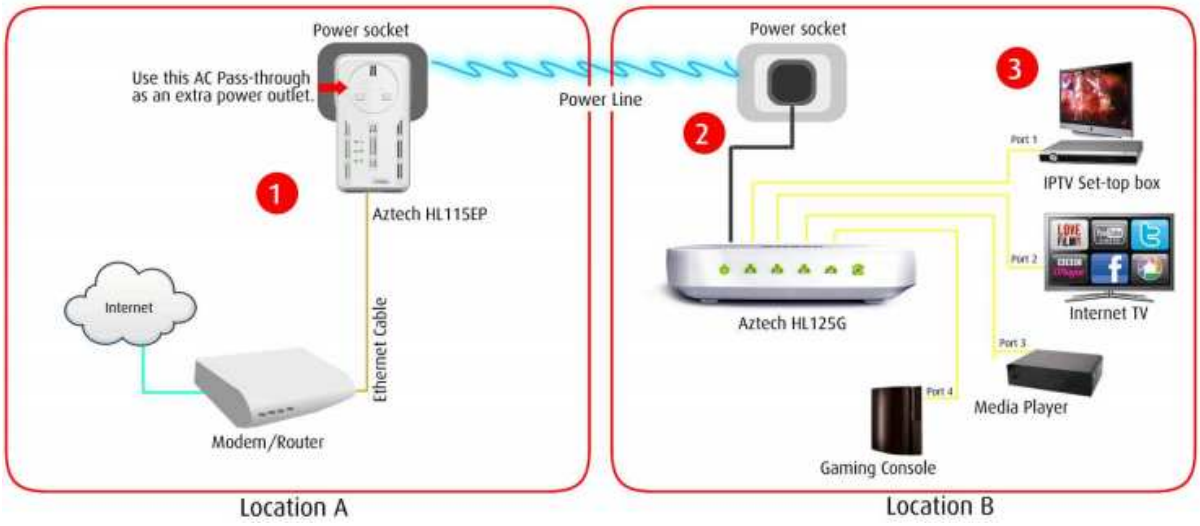

2. In Location A plug in your HomePlugAV into the power outlet then connect it to your Modem/Router's Ethernet LAN port using an Ethernet cable.

3. In Location B connect the power cable of your 4-Port HomePlugAV then plug it into the power socket. Connect your Ethernet devices with an Ethernet cable. Your HomePlugAV is now ready to use.

How to Use Simple Connect

Simple Connect provides a more convenient way of creating your HomePlugAV network without the need to open the HomePlugAV Utility software from a computer. The button has three main functions which include:

- Resetting the Private Network Name
- Creating a Secured HomePlugAV Network
- Joining an existing Secured HomePlugAV Network

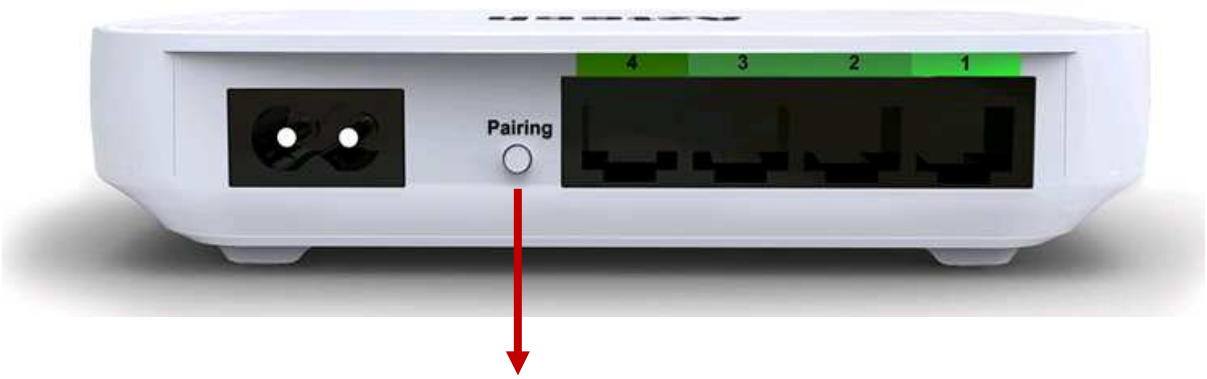

Simple Connect Button

Resetting the Private Network Name

Simple Connect allows you to reset the HomePlugAV's Private Network Name to a random key. When a HomePlugAV is reset to a random key, it will not be able to communicate with any other device.

Note: Resetting the Private Network Name is different from resetting the device to its factory default settings. If you intend to reset the device to its factory default settings, press RESET on the device.

To reset the Private Network Name using Simple Connect:

Step 1

Press Simple Connect button for 10 seconds or wait until ALL LED blinks. The Powerline Activity LED will switch OFF on both units.

Step 2

Do the same procedure on unit 2 to reset its Private Network Name. Press the Simple Connect button for 2 seconds on both units to pair the devices.

Creating a Secured HomePlugAV Network

To create a HomePlugAV network, you need at least two HomePlugAV devices using random Private Network Names. When you press Simple Connect for 10 seconds on both devices, a common Private Network Name will be automatically generated to enable them to communicate with each other.

Note: New HomePlugAV can already communicate with each other out of the box. However, if you intend to create a new Private Network Name using Simple Connect for both devices, you need to reset their Private Network Names to a random key before proceeding.

To create a Secured HomePlugAV network using Simple Connect:

Step 1

Plug your HomePlugAVs side by side where you can easily observe the LED behavior.

Upon connection, the LEDs will blink simultaneously and then the Power LED lights on steadily.

Press the Simple Connect button of the HomePlugAV X for ten seconds. All LED will blink indicating that the Private Network Name has been randomize.

Press the Simple Connect button of the HomePlugAV Y for ten seconds. All LED will blink indicating that the Private Network Name has been randomize.

HomePlugAV X

HomePlugAV Y

Step 2

Press Simple Connect for two seconds on HomePlugAV X. After you release the button, the Power LED ⏻ will blink. If the Power LED ⏻ did not blink, press Simple Connect again for two seconds.

Note: Do not press Simple Connect for more than 2 seconds.

Step 3

Press Simple Connect for two seconds on HomePlugAV Y. After you release the button, the Power LED ⏻ will blink. If the Power LED ⏻ did not blink, press Simple Connect again for two seconds.

Make sure to press Simple Connect on HomePlugAV Y within two minutes after you press Simple Connect on HomePlug X.

The LEDs on both devices will switch off and on twice to signify that they are paired with another device.

Note: Do not press Simple Connect for more than 2 seconds

HomePlugAV X HomePlugAV Y

Step 4

To confirm if the connection was established, check the LEDs. The Power LEDs and the Powerline Activity LEDs on both HomePlugs are ON.

HomePlugAV XY

When the Powerline Activity LED on either HomePlugAV X or Y is off, this means the pairing is not successful. In this case, you need to redo the entire process again.

Step 5

Unplug the HomePlugAVs and then plug them to the location where you would like to use your devices. Connect your Ethernet devices using the Ethernet cables from the product package. After connecting the Ethernet cable, plug the HomePlugs directly to a wall outlet.

An Ethernet-enabled device can be a router, IPTV Set-top box, Internet TV, gaming console, network printer, or computer.

Note: HomePlugAVs work best when connected directly to a power outlet. Avoid plugging it to a power strip or power extension. Other electrical devices in the power strip produce electrical noise that may affect the performance of the HomePlug.

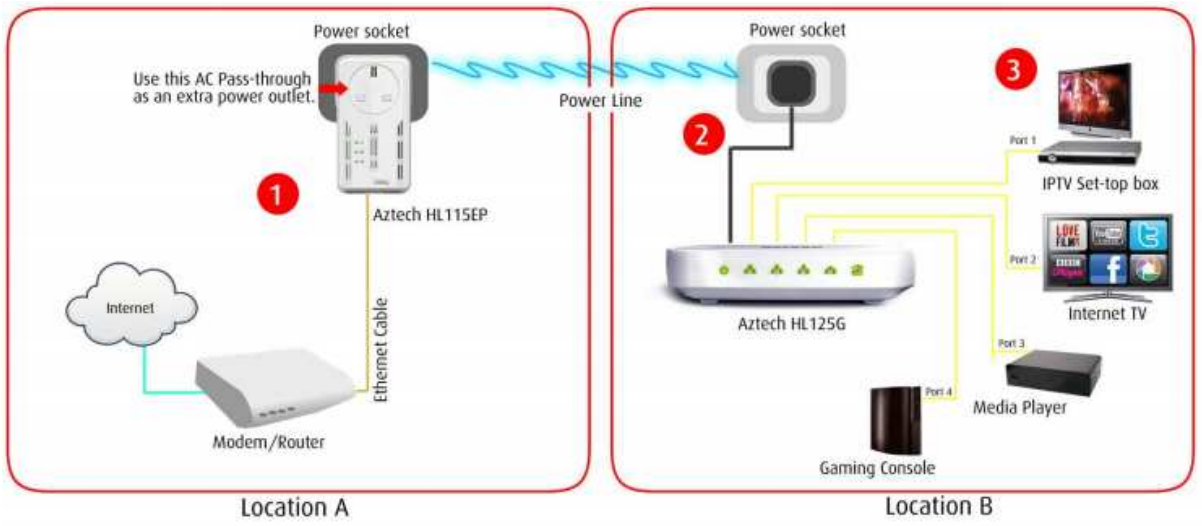

Joining an Existing Secured HomePlugAV Network

To enable a new device to join an existing network, Simple Connect will copy the Private Network Name of the existing network to the new HomePlugAV. If you pressed Simple Connect from multiple HomePlugAVs, only the signal from the first two devices will be processed.

To join an existing Secured HomePlugAV network using Simple Connect:

Step 1

Plug HomePlugAV Z beside one of your existing HomePlugAV device. Make sure you can easily observe the LED behavior.

Upon connection, HomePlug Z's LEDs will blink simultaneously and then the Power LED lights ON steadily.

Step 2

Press Simple Connect for ten seconds from a HomePlugAV Z. After you release the button, All LED will blink. The Power LED ⏻ will stay ON.

Note: If the all LED ⏻ did not blink, press Simple Connect again for ten seconds.

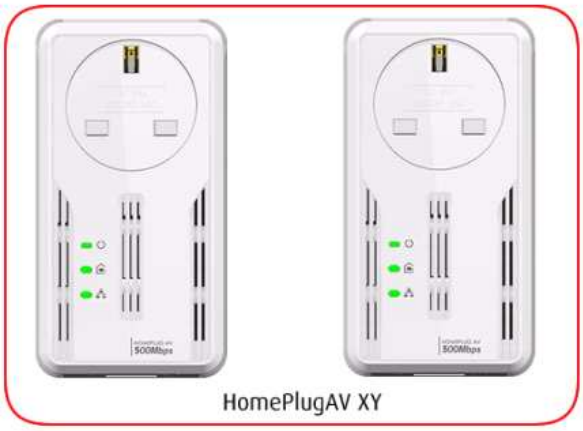

Step 3

Press Simple Connect Button for two seconds on one of the existing HomePlugAV device. After you release the button, the Power LED ⏻ will continuously blink. If the Power LED ⏻ did not blink, press Simple Connect again for two seconds.

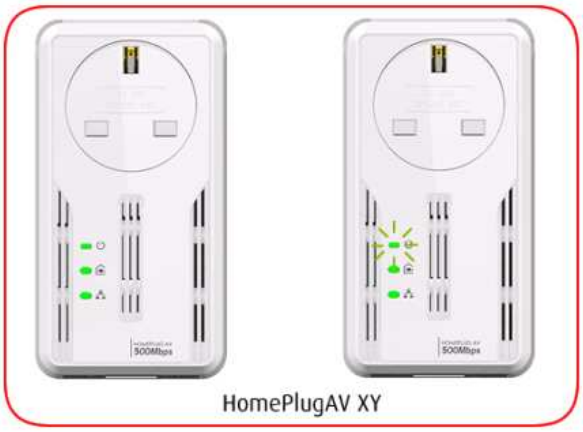

Make sure to press Simple Connect Button again on one of the existing HomePlugAV device within two minutes after you press Simple Connect from the HomePlugAV Z.

To confirm if the connection was established, check the LEDs. The Power LEDs ⏻ and the Powerline Activity LEDs ⌂ on all HomePlugs are ON.

If the Powerline Activity LED ⌂ on HomePlug Z is off, this means the pairing was not successful. You need to repeat the process again.

Step 5

Unplug HomePlug Z and then connect it to your Ethernet device using the Ethernet cables from the product package. After connecting the Ethernet cable, plug HomePlug Z directly to a wall outlet. An Ethernet-enabled device can be a router, computer, hub, gaming console, IP phone, network printer, or IP TV set-top box.

Note: HomePlugAVs work best when connected directly to a power outlet. Avoid plugging it to a power strip or power extension. The other electrical devices in the power strip create noise that may affect the performance of the HomePlug.

Determining Connection Rate

Each LED color of the Powerline Activity represents a connection rating. The connection rating can only be calculated when the device is part of an existing network. The exact connection rate value can also be viewed using HomePlugAV Utility.

Power Saving Mode

When Power LED blinks slowly in Green color HomePlugAV is on a Power saving status.

Conditions for HomePlugAV to go on a Power saving mode:

- Will go on a power saving mode after 15mins.
- There should be no Ethernet link.
- When connected to a PC or Laptop there should be no power on the network card when the computer is OFF.

Getting Started

Setting up the device is easy. The flowchart below provides an outline of the steps you need to complete the installation. There are brief descriptions beside each step to help you along. Detailed instructions are provided in the subsequent pages.

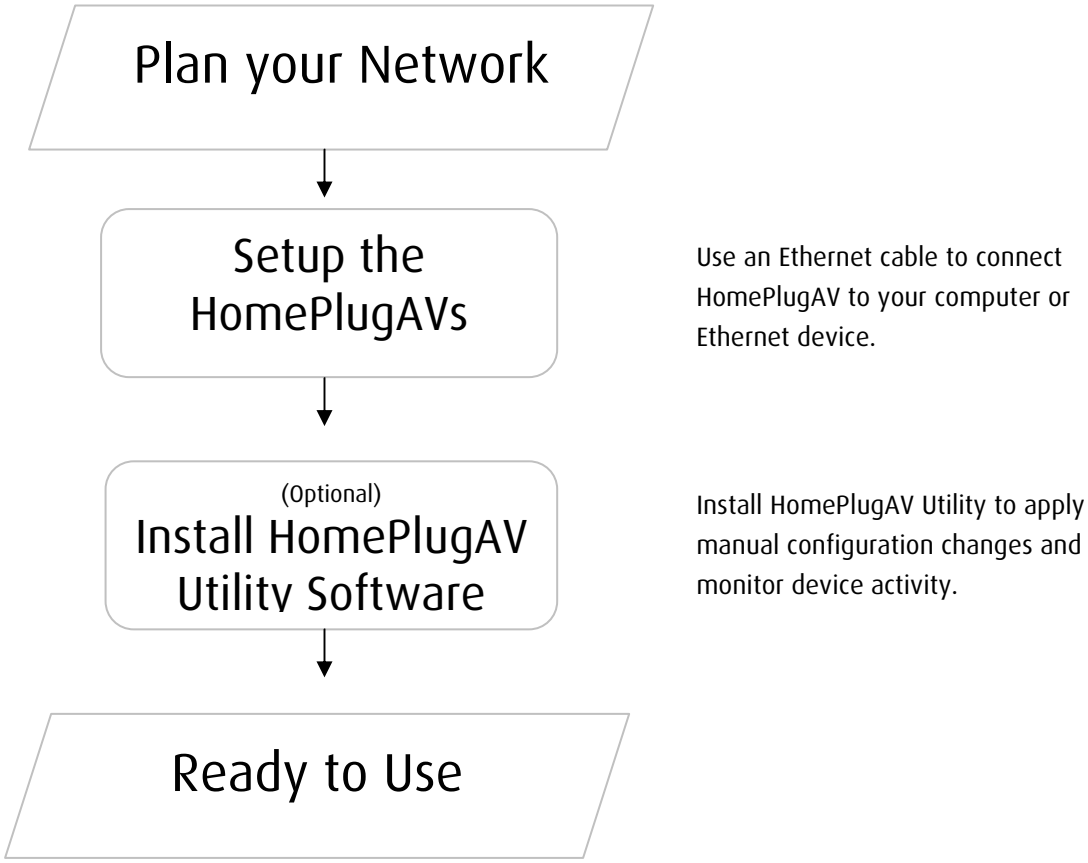
Plan your Network
Setup the HomePlugAVs
Use an Ethernet cable to connect HomePlugAV to your computer or Ethernet device.
(Optional)
Install HomePlugAV Utility Software
Install HomePlugAV Utility to apply manual configuration changes and monitor device activity.
Ready to Use

Plan Your Network

Here are ideas on how you can plan your HomePlugAV network.

Local Network

Share ultra fast Internet connection with any Ethernet device wherever it is in the house. Experience IPTV streaming into your home entertainment system. Connect your gaming console to the Internet and compete with other online players. Realize your high tech lifestyle by converging your Ethernet devices into a single network.

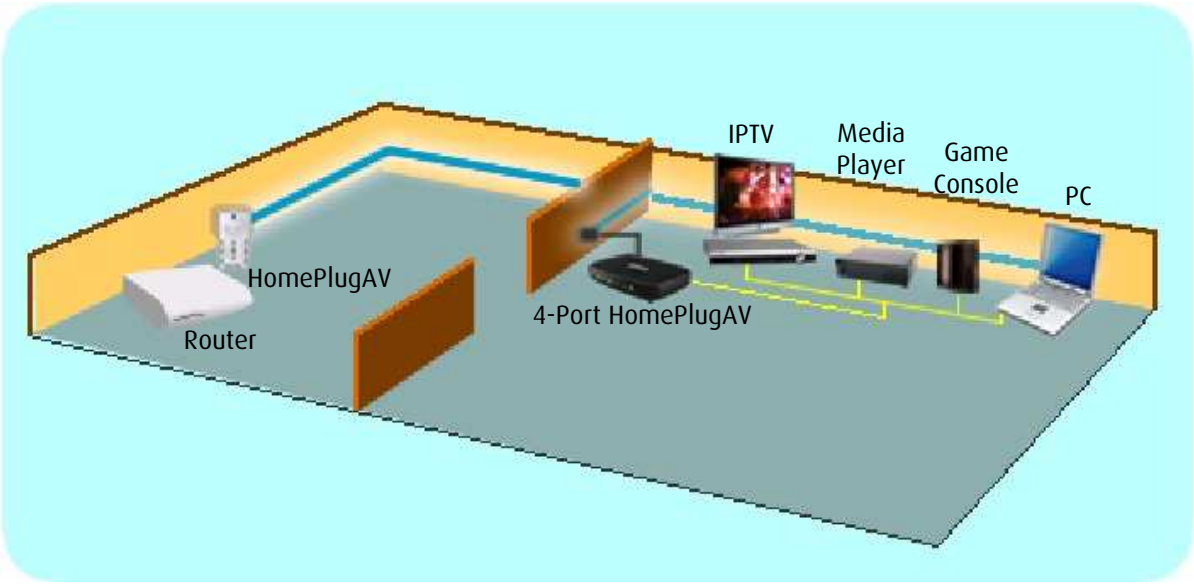

Setup the HomePlugAVs

For Twin Pack

HomePlugAVs from a Twin Pack are preconfigured to have a common Private Network Name unique for that pair. All you need to do is connect the HomePlugAVs to an Ethernet device and then plug it to a power outlet.

To setup a pair of HomePlugAVs:

1. Plug one end of the Ethernet cable to your Ethernet device and then connect the other end to HomePlugAV.
2. Connect the HomePlugAV to a power outlet.
3. Plug one end of the Ethernet cable to your other Ethernet device and then connect the other end to HomePlugAV.
4. Connect the HomePlugAV to a power outlet.

For Single Pack

A HomePlugAV from a single pack uses a preconfigured Private Network Name. To add it into an existing* network, all you need to do is to plug in your HomePlugAV into the power socket then wait until the Power Line Activity LED switches ON.

To add a HomePlugAV to an existing network:

1. Plug your new HomePlugAV beside your existing HomePlugAV devices to easily observe the LED behavior. Wait until the Power and PL-ACT LED to switch ON to confirm that the connection has been established.
2. Once the connection has been established, unplug your new HomePlugAV device then plug it into the location where you would like to use the device.
3. Plug one end of the Ethernet cable to your Ethernet device and then connect the other end to your new HomePlugAV. Connect the HomePlugAV to into the power outlet.

4. Wait until the Power and PL-ACT LED to switch ON. Your HomePlugAV is now ready for use.

* Follow these instructions if you have not changed the Private Network Name of your existing HomePlugAV from the first time use.

About HomePlugAV Utility

HomePlugAV Utility is a software application that allows you to configure HomePlugAV. It is mainly used for changing the Private Network Name, detecting other HomePlugAV's in the network, and measuring the throughput of devices. Installation is straightforward and the user interface is easy to use.

Note: To use HomePlugAV Utility, you need a computer using a Windows operating system with the .NET Framework installed. If you do not have .NET installed, the HomePlugAV installer will automatically install it for you.

Requirements

Your computer must meet the following requirements:

- Windows XP (32 and 64 bit), or Vista (32 and 64 bit)
- 300 MHz Processor
- 128 Mb of RAM
- .NET Framework
- Windows Installer 3.1 for Windows XP (32 and 64 bit)
- Network Interface Card
- CD-ROM
- 128 Mb of free hard disk space

Installation

To install HomePlugAV Utility:

1. Insert the Resource CD that comes with HomePlugAV into the CD-ROM drive.
2. Click the Start button, and then click Run.
3. In the Run dialog box, type D:\Setup.exe (where D: is your CD-ROM drive), and then click OK.
4. Follow the instructions on the installation wizard.

   Two applications will be installed in your computer - HomePlugAV Utility will be installed first followed by .NET Framework. The installer detects any version of .NET Framework in your computer. If .NET Framework is not installed, a dialog box opens to ask if you would like to install .NET Framework. Click Yes. The .NET Framework will not be installed if the required version is already in your computer.

Operating System	.NET Framework version to be installed
XP /Vista/Windows 7 32-bit	.NET Framework 3.5 SP 1 32-bit
XP /Vista/Windows 7 64-bit	.NET Framework 3.5 SP 1 64-bit

Opening HomePlugAV Utility

Two ways to open HomePlugAV Utility:

- Right-click the HomePlugAV Utility desktop shortcut and then select Open.
- Click the Start button, click Programs, click HomePlugAV, click HomePlugAV Ethernet Adapter, and then click HomePlugAV Utility.

The User Interface

The HomePlugAV Utility user interface is divided into tabs. These tabs include:

- Home
- Private Network Name
- Quality of Service
- Devices
- Firmware Upgrade

Home

Home provides a list of all the possible tasks you can perform in the HomePlugAV Utility. To start a task, you first need to select the network card connected to your HomePlugAV. This is most helpful when you have more than one network card in your computer. When you select a network card, the MAC Address of the HomePlugAV connected to your computer appears. If there is no HomePlugAV connected to your computer, no MAC address will appear.

After selecting the network card, there are four possible tasks you can perform. These tasks include:

- Change the Private Network Name
- Change the QoS settings
- View devices in the network
- Upgrade the firmware

When you select any task, you will be forwarded to the tab for the selected task.

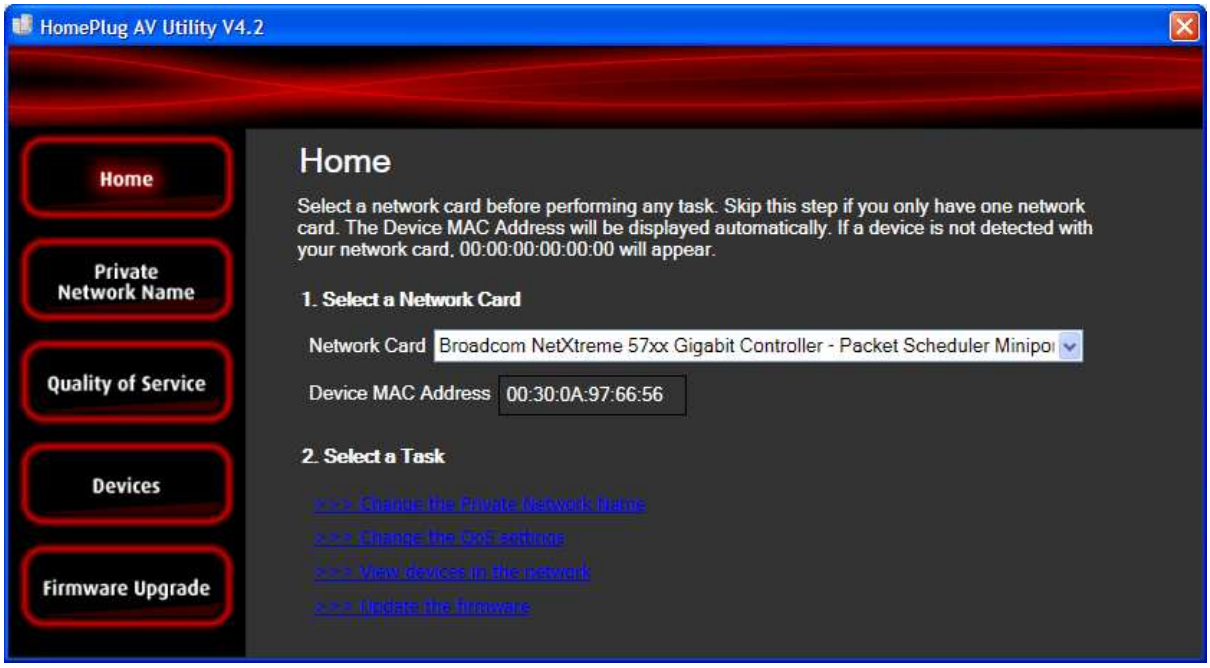
HomePlug AV Utility V4.2
Home
Private Network Name
Quality of Service
Devices
Firmware Upgrade
Home
Select a network card before performing any task. Skip this step if you only have one network card. The Device MAC Address will be displayed automatically. If a device is not detected with your network card, 00:00:00:00:00:00 will appear.
1. Select a Network Card
Network Card
Broadcom NetXtreme 57xx Gigabit Controller - Packet Scheduler Minipo
Device MAC Address
00:30:0A:97:66:56
2. Select a Task
>>> Change the Private Network Name
>>> Change the QoS settings
>>> View devices in the network
>>> Update the firmware

Home

Private Network Name

Private Network Name provides the function to manually change the Private Network Name of local and remote HomePlugAVs. A Private Network Name is a string of 8 to 64 characters enables HomePlugAV devices to communicate with each other.

If you intend to create multiple networks, you can assign different Private Network Names among your devices. You have to, however, make sure that at least two HomePlugAVs have a similar Private Network Name. A HomePlugAV that uses a unique or random Private Network Name will not be able to communicate with other devices.

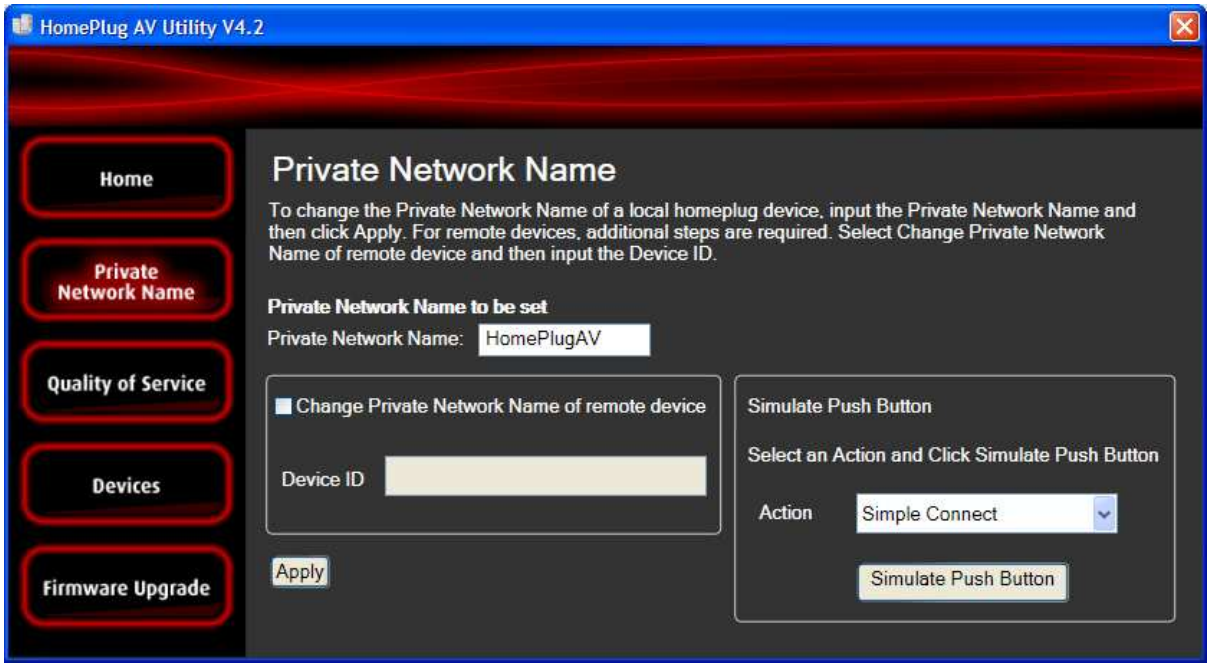
HomePlug AV Utility V4.2
Home
Private Network Name
Quality of Service
Devices
Firmware Upgrade
Private Network Name
To change the Private Network Name of a local homeplug device, input the Private Network Name and then click Apply. For remote devices, additional steps are required. Select Change Private Network Name of remote device and then input the Device ID.
Private Network Name to be set
Private Network Name: HomePlugAV
Change Private Network Name of remote device
Device ID
Apply
Simulate Push Button
Select an Action and Click Simulate Push Button
Action
Simple Connect
Simulate Push Button

Private Network Name

Note: In case you cannot connect into the network after changing the Private Network Name, please power cycle the device. To power cycle, disconnect and then reconnect HomePlugAV from the power outlet.

Local Private Network Name

Local Private Network Name refers to the Private Network Name of the HomePlugAV that is directly connected to the computer where you use HomePlugAV Utility.

To change the local Private Network Name:

1. Open HomePlugAV Utility.
2. Click Private Network Name.
3. Type the new Private Network Name. This field is case sensitive. It accepts 8 to 64 alphanumeric characters including punctuation marks but no spaces.
4. Click Apply. When the process is complete, the message Settings Applied appears.

Remote Private Network Name

Without leaving your computer, you can change the Private Network Name of remote HomePlugAV devices, provided they are using the same Private Network Name as your local HomePlugAV. You cannot change the Private Network Name of remote devices that is not currently networked with your local HomePlugAV.

Note: When changing the Private Network Name of remote devices, you will need the Device ID that appears on the label pasted on the device. It will be more helpful if you list down the Device ID of all your HomePlugAVs to enable you to remotely change their settings using the HomePlugAV Utility software.

To change the Private Network Name of a remote HomePlugAV:

1. Open HomePlugAV Utility.
2. Click Private Network Name.
3. Type the new Private Network Name. This field is case sensitive. It accepts 8 to 64 alphanumeric characters including punctuation marks but no spaces.
4. Select Change Private Network Name of remote device.

5. Type the Device ID of the remote device. The Device ID can be found on the label pasted on the device.

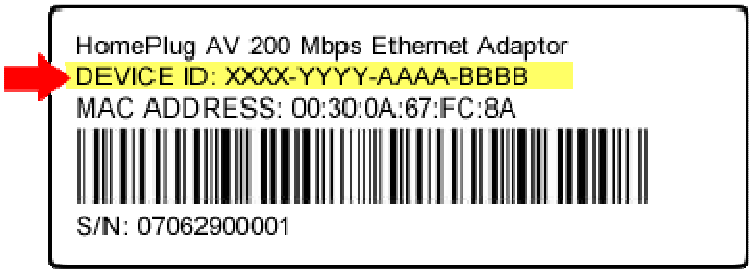

6. Click Apply. When the process is complete, the message Settings Applied appears.

   After changing the Private Network Name of the remote HomePlugAV, it will no longer be able to communicate with your local HomePlugAV, unless you use a similar Private Network Name for your local HomePlugAV.

Simulate Simple Connect Button

Simulate Simple Connect Button allows you to apply functionalities without manually pressing the Simple Connect button on a HomePlugAV device. However, this only works on local devices.

Simple Connect Select to search and pair with another device, or search and join an existing HomePlugAV network.

NMK Randomize Select to reset to a random Private Network Name. A HomePlugAV using a random Private Network Name will be disconnected from the HomePlug network and will not be able to communicate with other devices until it forms a new network or joins an existing network.

AVLN Status Displays the HomePlugAV Logical Network membership status number.

Note: The Simulate Simple Connect Button functions from HomePlugAV Utility can be used for HomePlugAV versions with or without the Simple Connect button on the device.

To simulate a Simple Connect function:

1. Connect HomePlugAV to your computer.
2. Select a Simulate Simple Connect Button action:
    a. Simple Connect
    b. PNN Randomize
    c. AVLN Status
3. Click Simulate Button Push.

Quality of Service

Quality of Service gives you the capability to prioritize particular applications within your network. QoS is not enabled by default.

Quality of Service

QoS Modes:

Online Game/Internet Prioritizes data streaming

Audio or Video Prioritizes data streaming multimedia streaming

Voice over IP Prioritizes voice applications

To enable QoS:

1. Open HomePlugAV Utility.
2. Click Quality of Service.
3. Check Enable QoS.
4. Select a QoS mode.
5. Click Apply. When the process is complete, the message Settings Applied appears.

Devices

Devices displays information about remote HomePlugAV's detected in the network. Only HomePlugAVs using the same Private Network Name as the local HomePlugAV will appear in the Remote Devices list.

Devices

Devices displays the following information:

TEI Displays the Terminal Equipment Identifier.

Device MAC address Displays the HomePlugAV MAC Address.

Bridge MAC Address Displays the MAC Address of the Ethernet network adapter connected to the HomePlugAV.

Connection Rate Displays the Transmit and Receive connection rates.

Firmware Upgrade

Use Firmware Upgrade to upgrade firmware of HomePlugAV. After upgrading the firmware, HomePlugAV will still retain the same Private Network Name and MAC address settings. Before you proceed with the upgrade, you need to have both the configuration file (PIB extension) and the firmware file (NVM extension). You can download upgrade files from the product's Web site.

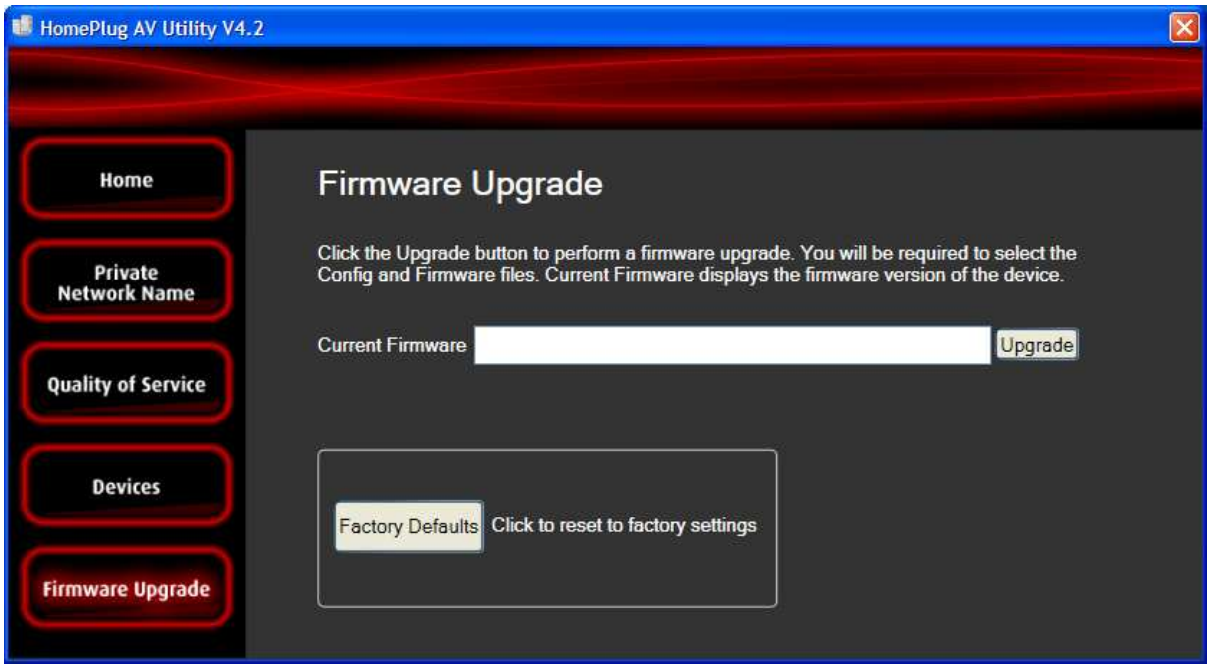
HomePlug AV Utility V4.2
Home
Private Network Name
Quality of Service
Devices
Firmware Upgrade
Firmware Upgrade
Click the Upgrade button to perform a firmware upgrade. You will be required to select the Config and Firmware files. Current Firmware displays the firmware version of the device.
Current Firmware
Upgrade
Factory Defaults
Click to reset to factory settings

Firmware Upgrade

To upgrade the firmware of a HomePlugAV:

1. Connect HomePlugAV to the computer where you are using HomePlugAV Utility.
2. Open HomePlugAV Utility.
3. Click Firmware Upgrade.
4. Click Browse to select the location of the configuration and firmware files. The configuration file has a PIB extension while the firmware file has an NVM extension. After you select the location of the configuration and firmware files, the upgrade will immediately start.

To reset to factory default:

1. Connect HomePlugAV to the computer where you are using HomePlugAV Utility.
2. Open HomePlugAV Utility.
3. Click Factory Default.

Note: You can also perform a reset to the factory default when you press the RESET button on the device for 2 seconds.

Appendix

Frequently Asked Questions

Can I use HomePlugAV with older HomePlug versions?

All HomePlugAV versions can communicate with each other. HomePlugAV, however, is not backward compatible with HomePlug 1.0 releases.

If you will use different versions of HomePlugAV in a single network, you need to use the HomePlugAV Utility software to create a Private Network Name for all devices. Unlike the new version of HomePlugAV, older versions do not feature the Simple Connect button, which enables the device to create a common Private Network Name without using the software.

How does HomePlugAV achieve a higher bandwidth than HomePlug Turbo and HomePlug 1.0 devices?

HomePlugAV complies with the HomePlugAV standard. It achieves higher data throughput by using a broader frequency spectrum (2-30 MHz rather than 4-21 MHz), by using a better access method (Time Division Multiple Access rather than Carrier Sense Multiple Access/Collision Detection), and by using a better processor with a greater bitload per Hz.

Can HomePlugAV be used alongside HomePlug 1.0 devices within the network?

HomePlug 1.0 and HomePlugAV standards can coexist but they will not be able to communicate with each other.

Which operating system (OS) is compatible with HomePlugAV?

HomePlugAV is operating system independent. However, the HomePlugAV Utility requires a Windows operating system (XP/Vista/Windows 7) with the **.NET Framework 3.5 SP 1** installed.

How difficult is it to set up a network with HomePlugAV?

HomePlugAV is a plug and play device. Connect it to an Ethernet device, plug it to a power outlet and it is ready to use. Even the most inexperienced user can set up the

network with ease. Installing the HomePlugAV Utility software is only needed if you intend to manually change the Private Network Name or view the connection rate.

How many devices do I need to create a HomePlugAV network?

At least two devices are needed to create a HomePlugAV network.

Is HomePlugAV suitable for triple play like the simultaneous use of data, voice, and video applications?

Yes, triple play is supported.

What data transfer rates do I need for high definition TV?

A variety of HDTV resolutions are available. The following are the most common resolutions opposite the required transfer rate:

- 720p, mpeg2: 09-10 Mbps
- 720p, mpeg4: 06-08 Mbps
- 1080i, mpeg2: 12-15 Mbps
- 1080i, mpeg4: 08-10 Mbps

Does HomePlugAV have a security mechanism?

Yes. HomePlugAV uses 128-bit AES encryption.

Are Gigabit Ethernet adapters required for use with HomePlugAV?

No. Under ideal conditions, HomePlugAV has a physical gross data rate of up to 500Mbps. The effective net data rate is somewhat lower. A 100Mbps Ethernet adapter is therefore adequate in most cases.

Does the technology support multicast video server streams (IP-TV)?

Yes.

Do I need an Automatic Voltage Regulator (AVR) for HomePlugAV?

No. HomePlugAV can operate in an environment using 100-240V.

What is the maximum range of HomePlugAV?

The maximum range is 200 meters.

If one HomePlugAV is connected to a LAN switch, is it possible for other computers in the switch to communicate with other HomePlugAV devices?

Yes.

Can my neighbors access my HomePlugAV network?

Your electric meter prevents any signal from going outside your household. However, we strongly suggest that you create your own personalized Private Network Name to prevent unauthorized access into your network.

Can I use HomePlugAV to connect computers located in different floors of the building?

Yes, as long as the electric wires are connected and do not exceed 200 meters.

Can I use HomePlugAV in an old house with old power supply lines (partly without separated ground wire)?

Yes. However, performance may be affected because of the quality of the wires.

Can I plug HomePlugAV into a multiple socket switch or do I have to plug it directly to the power outlet?

You can plug HomePlugAV into a multiple socket switch. However, we strongly advise to plug it directly to a power outlet to achieve optimal performance.

Do I need electrical grounding for the device?

HomePlugAV does not require electrical grounding.

After a blackout, will HomePlugAV switch on automatically?

Yes. If you experience connection issues, unplug the device and plug it back.

What will happen if I connect two HomePlugAVs to the same router?

This will cause collision and slow down the network traffic. To prevent collision, you need to assign different Private Network Names on each HomePlugAV.

FCC Statement

This equipment has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

European Regulations

The product has been designed, tested and manufactured according to the European R&TTE directive 1999/5/EC.

CE 1313 !

⚠ Safety Warnings

For your safety, be sure to read and follow all warning notices and instructions.

- Do not open the device. Opening or removing the device cover can expose you to dangerous high voltage points or other risks. Only qualified service personnel can service the device. Please contact your vendor for further information.
- Do not use your device during a thunderstorm. There may be a risk of electric shock brought about by lightning.
- Do not expose your device to dust or corrosive liquids.
- Do not use this product near water sources.
- Make sure to connect the cables to the correct ports.
- Do not obstruct the ventilation slots on the device.